

# **NE6213CK COMPRESSOR**

---

## **TECHNICAL SPECIFICATION**



HUANGSHI DONPER COMPRESSOR CO., LTD.

2023.11

# INDEX

	<b>Page</b>
1、Compressor Type.....	2
2、Performance Data.....	2
3、Running Condition.....	2
4、Compressor Mechanical Information.....	3
5、Compressor Shape.....	3
6、Wiring Diagram.....	4
7、Fixing of mounting bracket and cabinet base.....	4
8、Starting relay and overload protector.....	5
9、Capacitor.....	6
10、Delivery State.....	6
11、Package、Storage and Transportation.....	7
12、Technical Items.....	7

## 1. Compressor Type

Compressor model	NE6213CK
Rated voltage/frequency	220-240V~50Hz
Refrigerant	R404A
Application	Middle/High back pressure (M/HBP)
Cooling method	Fan Cooling
Start torque	High starting torque (HST)
Control device	Capillary tube
Motor type	CSIR
Starting capacitor	75μF

## 2. Performance Data

Displacement	Net Wt.	Oil Charge	Cooling Capacity(≥95%)								COP(≥95%)	
			ASHRAE							CECOMAF	ASHRAE	CECOMAF
			-15	-10	-5	0	5	7.2	10	5	7.2	5
cm <sup>3</sup>	kg	ml	w	w	w	w	w	w	w	w	w/w	w/w
12.1	11.9±0.4	370±10	550	862	1080	1327	1602	1732	2265	1500	1.80	1.60

Note: These datas come from the test without a current starting relay

Testing condition:

Test conditions	HBP	
	ASHRAE	CECOMAF
Evaporating Temp.	+7.2℃	+5℃
Ambient Temp.	+35.0℃	+32℃
Condensing Temp.	+54.4℃	+55℃
Suction Temp.	+35.0℃	+32℃
Subcooling Temp.	+46.1℃	+55℃


## 3. Running Condition

Ambient temp.	0~43℃
Evaporating temp.	-15~15℃
Voltage range	187~254V
Max. condensing temp.	65℃
Max. winding temp.	130℃
Max. shell temp.	110℃
Max. discharge temp.	130℃
Start voltage	187V [1.1/1.1MPa(abs)]
Shell min. resistance to pressure	35bar

#### 4. Compressor Mechanical Information

Oil type	POE
Viscosity	28.8~35.2 mm <sup>2</sup> /s (40℃)
Oil charged	370±10ml
Diameter of suction tube (I.D.)	Φ 8.15±0.1mm
Diameter of discharge tube(I.D.)	Φ 6.15±0.1mm
Diameter of process tube (I.D.)	Φ 6.15±0.1mm
Material of suction tube, process tube and discharge tube	copper tube
Compressor noise	≤62dB(A)
Vibration	≤2.8m/s <sup>2</sup>
Protecting gas	-0.06~-0.02MPa

#### 5. Compressor Shape

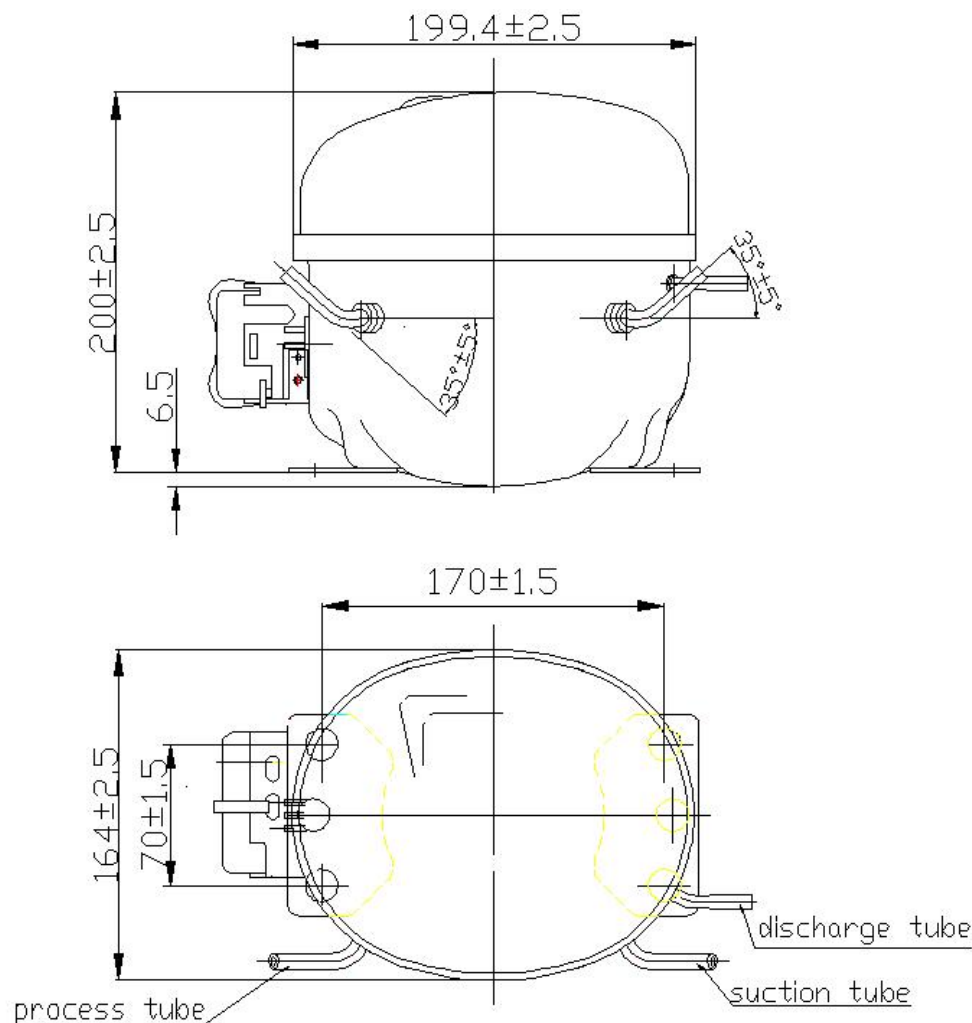


Caution:Suction tube and process tube can not be exchanged

Unmarked tolerance: ±5mm

Unmarked Angle: ±10°


## 6. Wiring Diagram

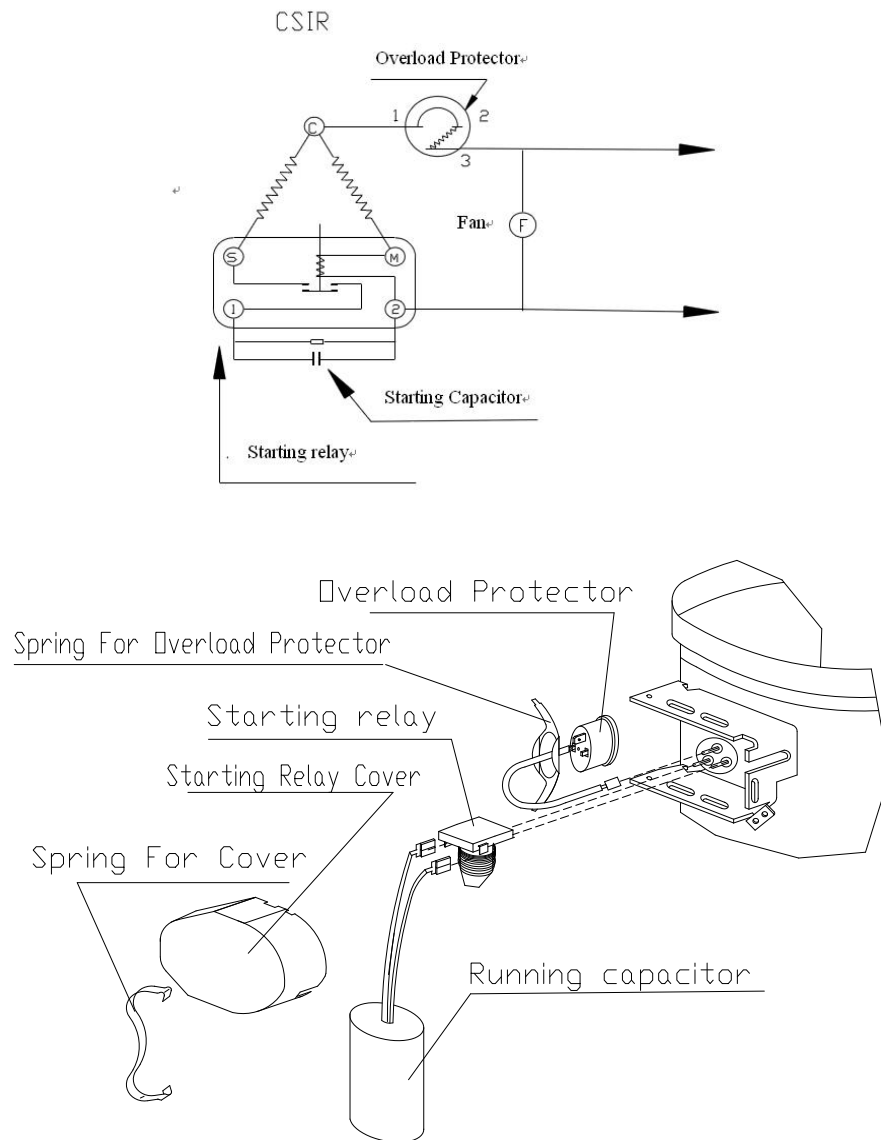

Note: Each of the starting relay, the overload protector, the cover, the spring tap, the spring for overload protector, the starting capacitor and the grounding screw is separately provided by our company.

## 7. Fixing of mounting bracket and cabinet base

- 1、Hexagon nut
- 2、Spring washer
- 3、Flat washer
- 4、Compressor mounting bracket
- 5、Rubber grommet
- 6、Sleeve
- 7、Cabinet base
- 8、Screw

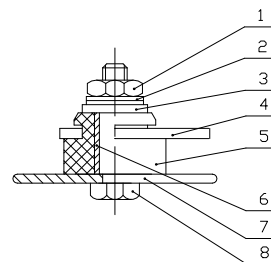

## 8. Starting relay and overload protector


### 8.1 Starting relay

Model	QL2-12.0	
Supplier	Hangzhou Star shuaier Electric Appliance Co.,Ltd	Changshu Tianyin Electromechanical Co. Ltd.
Max.Close Current A	12.0	
Min Open Currente S	10.2	

Assembly force  $\leq 100\text{N}$  Disassembly force  $\geq 25\text{N}$

Flammability: Anti-flammability

QL2-12.0

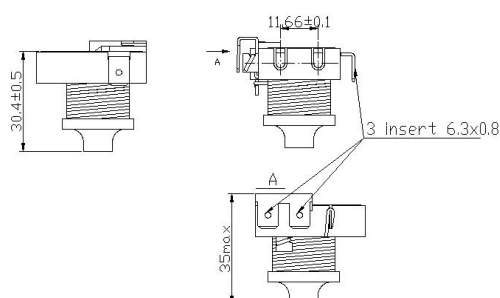


### 8.2 Overload protector

Model	B205-120	
Supplier	Changshu Tianyin Electromechanical Co. Ltd.	Hangzhou Star shuaier Electric Appliance Co.,Ltd
Max.T.C Amp.(25°C) A	20.5	
Trip time S	6~16	
Reset time S	10~80	
Open temp. $\pm 5^{\circ}\text{C}$	120	
Close temp. $\pm 9^{\circ}\text{C}$	61	

Assembly force  $\leq 80\text{N}$  Disassembly force  $\geq 12.5\text{N}$

Flammability: Anti-flammability

B205-120

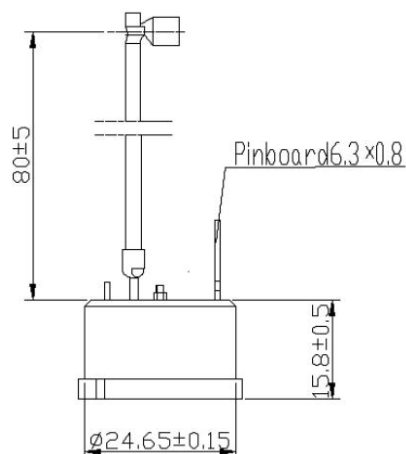

## 9. Capacitor

### 9.1 Starting Capacitor

Starting Capacitor	Model $\mu\text{F}$	75
	Rated voltage V.AC	330
	Supplier and model	Huangshan Zhenzhou Electronic Technology Co., Ltd.

## 10. Delivery State

No.	Name	Model	Quantity	CODE
1	Compressor	NE6213CK	1pcs	
2	Rubber plug	$\Phi 10.3$	1pcs	Installed on the compressor
		$\Phi 8.2$	2pcs	Installed on the compressor
3	Rubber grommet	QET-03C	4pcs	
4	Starting relay	QL2-12.0	1pcs	Changshu Tianyin Electromechanical Co.,Ltd.
				Hangzhou Star shuaier Electric Appliance Co.,Ltd.
5	Overload protector	B205-120	1pcs	Changshu Tianyin Electromechanical Co.,Ltd.
				Hangzhou Star shuaier Electric Appliance Co.,Ltd.
6	Starting capacitor	75 $\mu\text{F}$	1pcs	Huangshan Zhenzhou Electronic Technology Co., Ltd
7	Cover	E1	1pcs	
8	Grounding screw	QET.1-24C	1pcs	
9	Sleeve	$\Phi 10 \times 17$	4pcs	
10	Spring tap	QET-09B	1pcs	
11	Spring for overload protector	QET-07	1pcs	
12	Anchor bolt assembly	M6 $\times$ 30	4pcs	
13	Nut	QET-27	4pcs	
14	Fixed frame	Q34L-14A	1pcs	
15	Capacitor bracket	Q34L-13A	1pcs	
16	Connecting screw	M4 $\times$ 8	1pcs	
17	Self-tapping screws	ST4.2 $\times$ 13	2pcs	

Notes:1. Except for special remakes, all electrical parts and equipment assembly are supplied separately, not installed on the compressor.

2.All electrical parts and equipment assembly according to “Delivery state” are all provided by our company.

## 11. Package、Storage and Transportation

Package type	unrecyclable
Quantity	60 pcs/box
Transportation	By sea
Storage	Max. 2 layers
Cross Weight            Kg	749±24
Net Weight              Kg	714±24
Volume                   m <sup>3</sup>	0.94
Dimension: length ×width ×height    cm	103 × 89 × 103
Main components	Wooden supporter、upper wooden cover、foam divider、plastic sheet、cardboard cover、wrapping
Movement	Keep the compressor in normal or vertical position
Trans. test requirement	No allowable compressor's damage and performance loss.

## 12、Technical Items

- (1)、Don't take off the rubber plugs before using and installing compressor to prevent dust and moisture.
- (2)、Don't turn down or incline the compressor during storage, transportation or installation and avoid vibration and shock.
- (3)、The compressor must be kept horizontally during running, the inclination angle must be less than 5°.
- (4)、A special polyester oil is charged in the R404A compressor and the charging volume has been optimized by DONPER. Don't pour out or add any refrigerant oil.
- (5)、The interval of compressor operation must be more than 4 minutes in order to obtain a pressure balance in the systems.
- (6)、Don't start or run in the case of vacuum or charge high voltage in the compressor. The compressor cannot be used to vacuumize the refrigeration system.
- (7)、The design of refrigeration system must be suitable to insure the oil could flow back to compressor.
- (8)、The maximum ambient temperature of the compressor operation is 43°C. When continuously operating under the maximum ambient temperature 43°C, the condensing pressure and the peak pressure should not exceed as showing in the following table.

Refrigerant	R404A
Max. condensing pressure	2.68MPa
Peak	3.0Mpa

- (9)、Widen the evaporating Temp. range of the compressor should be approved by DONPER.



- (10)、Compressor should be stored in a dry place.
- (11)、Compressor accessories (eg: starting relay, overload protector etc.) are put in the accessories box instead of fixing on the compressor.
- (12)、The inventory period of the compressor after leaving the factory should not exceed 6 months. If it exceeds 6 months, please check if the protective gas inside the compressor is under negative pressure.
- (13)、It's necessary to keep the compressor without rubber plug as short time as possible (max time 10 min).
- (14)、R404A systems require a filter with drying agent which suitable for R404A refrigerant
- (15)、The vacuum pump and the charging system must only be dedicated to R404A .
- (16)、The refrigeration system should minimize the content of chlorine and moisture, and must be free of paraffin and silicon oil.
- (17)、The organic substance non-compatible with R404A cannot be used in the refrigeration system.